

Model Number

Air source filter F series



F 200 - 08 - M -

① ② ③ ④

① Series	② Nozzle diameter			③ Drainage mode		④ Pressure Gauge	
F200	06	PS 1/8"	F200	blank	Semi-Auto drain	blank	pressure gauge
F400	08	PS 1/4"	F200, F400	M	Manual drain	N	no pressure gauge
F600	10	PS 3/8"	F400	AD	Auto Drain		
	15	PS 1/2"	F400				
	20	PS 3/4"	F600				
	25	PS 1"	F600				

Pressure regulator R series



R 200 - 08 - - L - -

① ② ③ ④ ⑤ ⑥

① Series	② Nozzle diameter			③ Type code		④ Type code	
R200	06	PS 1/8"	R200	blank	Standard	blank	Standard
R400	08	PS 1/4"	R200, R400	VC	Overflow	L	Low pressure
R600	10	PS 3/8"	R400				
	15	PS 1/2"	R400				
	20	PS 3/4"	R600				
	25	PS 1"	R600				

⑤ Bracket		⑥ Pressure Gauge	
blank	No bracket	blank	pressure gauge
J	Bracket	N	no pressure gauge

Oil mist L series



L 200 - 08

① ②

① Series	② Nozzle diameter		
L200	06	PS 1/8"	L200
L400	08	PS 1/4"	L200, L400
L600	10	PS 3/8"	L400
	15	PS 1/2"	L400
	20	PS 3/4"	L600
	25	PS 1"	L600

Pressure regulator filter FR series



FR 200 - 08 - M -

① ② ③ ④

① Series	② Nozzle diameter			③ Drainage mode		④ Pressure Gauge	
FR200	06	PS 1/8"	FR200	blank	Semi-Auto drain	blank	pressure gauge
FR400	08	PS 1/4"	FR200, FR400	M	Manual drain	N	no pressure gauge
FR600	10	PS 3/8"	FR400	AD	Auto Drain		
	15	PS 1/2"	FR400				
	20	PS 3/4"	FR600				
	25	PS 1"	FR600				