




标准气缸安装附件

TC 中摆

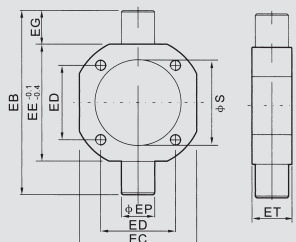

内径	40	50	63	80	100	125	160	200
EB	113	126	138	164	182	210	264	336
EC	63	76	88	114	132	160	200	240
ED	37	47	56	70	84	110	140	175
EE	63	76	88	114	132	160	200	240
EG	25	25	25	25	25	25	32	48
EP	25	25	25	25	25	25	32	37
ET	30	30	30	30	40	30	38	44
S	45.5	55.5	68.5	87.5	107.5	134.5	172.5	212.5


TC-M 型

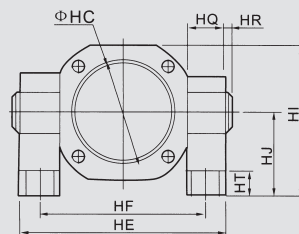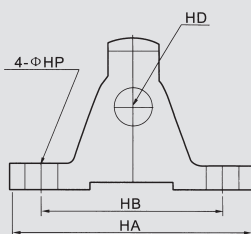

内径	HA	HB	HC	HD	HE	HF	HI	HJ	HQ	HR	HT	HP
40	110	80	45.5	22	109	86	81.5	50	23	2	12	12
50	110	80	55.5	22	122	99	88	50	23	2	12	12
63	110	80	68.5	22	134	111	94	50	23	2	12	12
80	120	85	87.5	22	160	137	127	70	23	2	14	14
100	120	85	107.5	22	178	155	136	70	23	2	14	14


迷你气缸配件

M-UJ
浮动接头

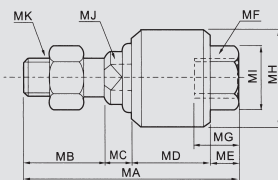

内径	MA	MB	MC	MD	ME	MF	MG	MH	MI	MJ	MK
20	51	20	6	17	8	M8x1.25	12	24	13	8	M8x1.25
25	58	22	7	21	8	M10x1.25	12	26	17	10	M10x1.25
32	58	22	7	21	8	M10x1.25	12	26	17	10	M10x1.25
40	58	22	8	21	7	M12x1.25	12	28	19	12	M12x1.25

M-PHS
鱼眼接头

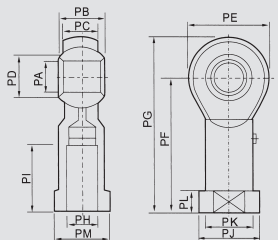

内径	PA	PB	PC	PD	PE	PF	PG	PH	PI	PJ	PK	PL	PM
20	8	12	9	10.4	22	36	47	M8x1.25	17	16	12.5	5	14
25	10	14	11	12.9	26	43	56	M10x1.25	21	19	15	6.5	17
32	10	14	11	12.9	26	43	56	M10x1.25	21	19	15	6.5	17
40	12	16	12	15.4	30	50	65	M12x1.25	24	22	17.5	6.5	19